

QUICK START GUIDE



For detailed instructions and troubleshooting assistance please reference the original owner's manual.

TECHNICAL SERVICE: 1-800-526-5362

SET UP

RUNNING THE SPRAYER WITHOUT PAINT OR WATER CAN CAUSE DAMAGE TO THE PUMP.

- Ensure battery is fully charged. Insert into unit
- Lock trigger on gun and tighten hose to sprayer
- Fully depress pusher valve (twice)

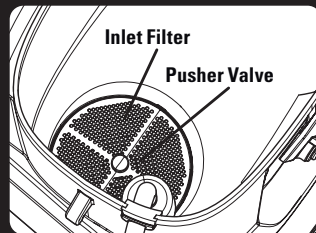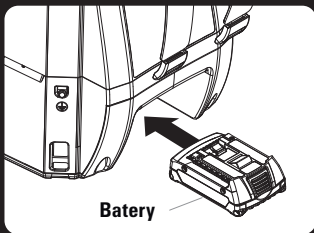

- Fill with paint and install cover
- Set Prime Spray Knob to **PRIME**
- Turn power switch on (Red light means it's on)
- Material will flow through return hose when fully primed



RE-PRIME AFTER EVERY REFILL.





- Set Prime Spray Knob to **SPRAY**
- Motor will run until hose is filled

SPRAY

- Lock trigger on gun and attach tip guard and tip – ensure completely tightened
- Set for vertical or horizontal spray

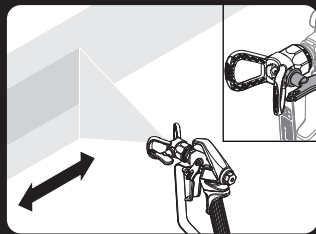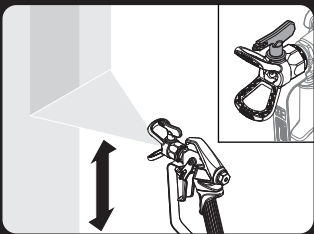


- Unlock trigger, hold gun 10–12" from surface
- Pull trigger, keep movement consistent and overlap each stroke by 50%

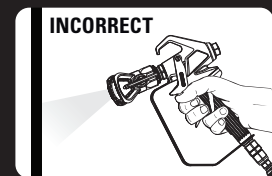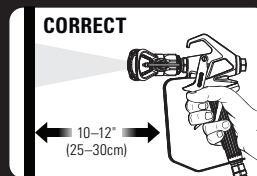

- Test sprayer prior to painting

IF TIP CLOGS FOLLOW STEPS BELOW.

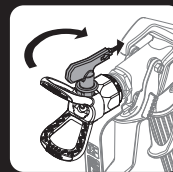

- Lock trigger and rotate spray tip 180°
- Point at waste container, unlock gun, squeeze trigger until clear
- Rotate tip back – resume spraying

CLEAN / STORE

IT IS IMPORTANT TO THOROUGHLY CLEAN THE TANK, HOSE AND GUN PRIOR TO STORAGE AND IN BETWEEN USES.

- Turn off and set Prime Spray Knob to **PRIME**
- Empty remaining paint
- Take off tip and tip guard (clean separately)

DO NOT ALLOW THE SPRAYER TO RUN WITHOUT FLUID.

CLEAN TANK

- Fill tank with appropriate cleaning solution and clean thoroughly (repeat until clean)

FLUSH SYSTEM

- Fill tank with coating manufacturer's recommended cleaning solution
- Set Prime Spray Knob to **PRIME**
- Turn on



- Flush until return hose is clean
- Set Prime Spray Knob to **SPRAY**
- Cycle solution through hose and gun (into waste container)
- Repeat until clean



STORE

- Remove gun-hose assembly from sprayer
- Press trigger to drain hose for storage
- Add penetrating oil to paint inlet and gun
- Cycle pump for 5 seconds